

- Cap Screw, Foot
- Impeller
- 6 Shaft
- Casing Ring, *Optional*
- Sleeve, Shaft
- Bearing, Line

- 26A Washer, Impeller
- 27 Adapter Ring
- Gasket, Impeller Screw 28
- 30A Gasket, Impeller Washer
- Key, Impeller 32 Cover, Thrust Bearing

Deflector

71

- Coupling Key
- Foot, Casing

Adapter

- 53D Support, Bearing Housing
- Seat, Mechanical Seal

- Housing, Bearing 99
- 99C Cap Screw, Adapter
- Cap Screw, Cover
- Ring, Seal Retainer
- 212A Ring, Bearing Retainer

Page 50