

2	Shaft
_	Silait

- 3 Casing Ring (2)
- 4 Impeller (first stage)
- Impeller (second stage) 4A
- Thrust Bearings (2) 6
- 7 Interstage Bushing

- 8 Line Bearing
- Shaft Sleeve (2) 10
- 11 Stuffing Box Bushing *
- Stuffing Box Throttle Bush 11A
- Shaft Nut (2) 14
- Deflector (2) 22
- 24 Bearing Lock Nut
- Bearing Lock Nut Washer 28
- 36 Impeller Key
- 36A Impeller Key
- 36B Coupling Key
- O-Ring, Shaft Sleeve (2)

- Set Screw, Casing Ring (2)
- Set Screw, Intrstg Bush 81B
- 91 Casing Gasket
- Gaskets, Spacer / Sleeve (4) 91A
- 155A Roll Pin (2)
- Spacer Sleeve 217

March 2019 Page 48

* Packed Box Only