

4A	Impeller (second stage)
6	Thrust Bearings (2)
7	Interstage Bushing

Impeller (first stage)

4

Shaft Sleeve (2) 11 Stuffing Box Bushing * Stuffing Box Throttle Bush 11A Shaft Nut (2) 14 Deflector (2)

22

Bearing Lock Nut Washer 28 36 Impeller Key 36A Impeller Key 36B Coupling Key O-Ring, Shaft Sleeve (2)

91 Casing Gasket Gaskets, Spacer / Sleeve (4) 91A 155A Roll Pin (2)

Spacer Sleeve 217

* Packed Box Only

Page 48B