


LR BEARING BRACKET SHOWING OIL LUBE SETUP.

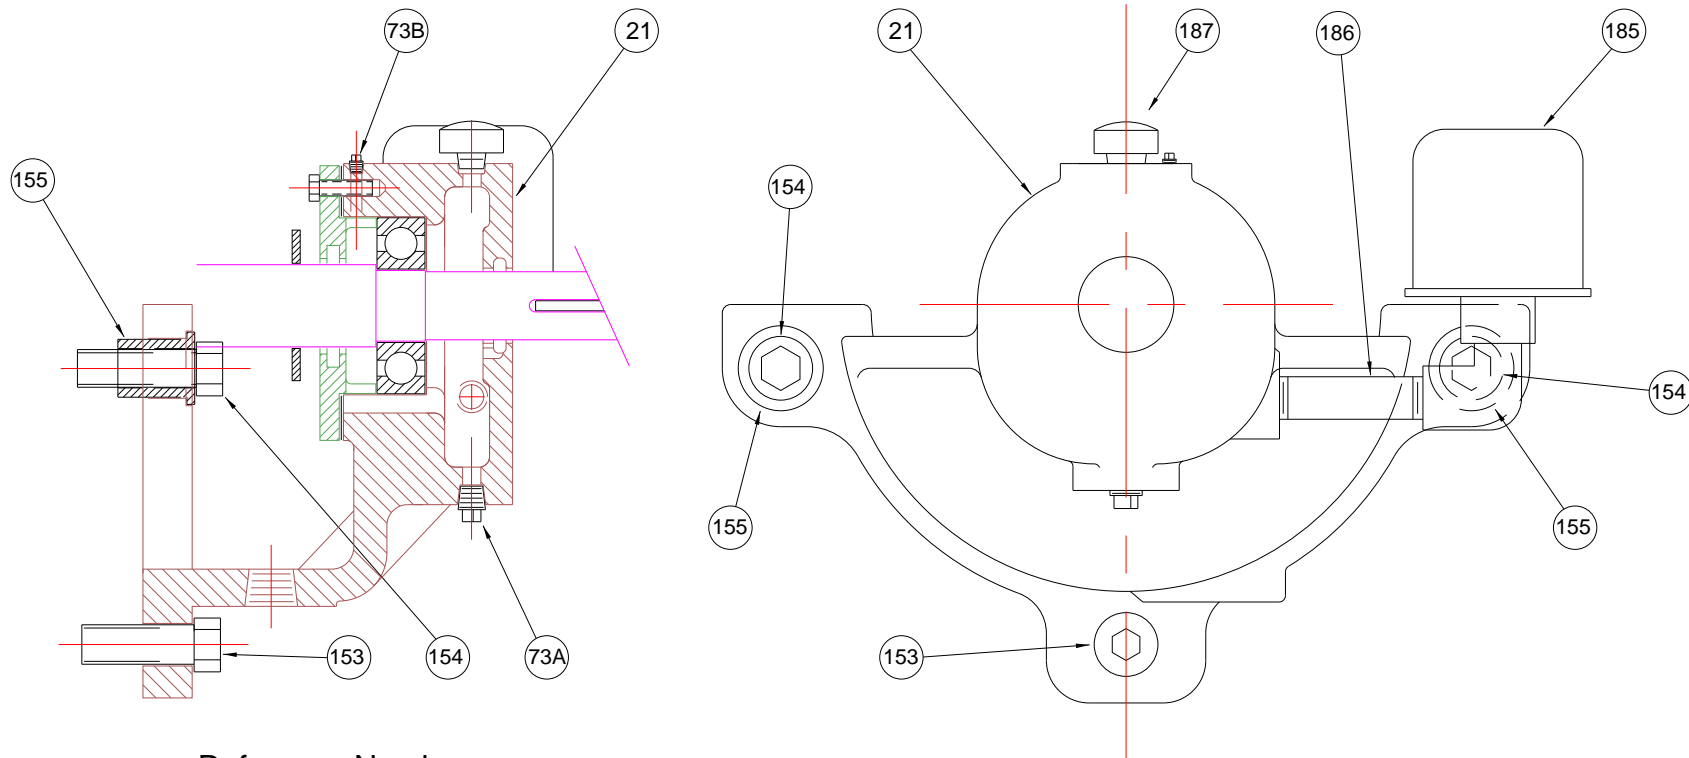

Reference Numbers

21	Bearing Bracket	155	Dowel Bushings
73A	1/4 inch Pipe Plug	185	Constant Level Oiler
73B	1/8 inch Pipe Plug	186	1/4 inch Pipe Nipple
153	Bearing Bracket Screws	187	Vent Cap
154	Dowel Bushing Screws		



© Any reproduction must include this copyright notice.